

## Fitting your Roman blind

### Instructions for Roman blind with cord and cleat

What you get with your blind:



2-4 wood screws




2-4 wall plugs




1 brass cleat with 2 brass screws

### 1 Attach your headrail

To masonry

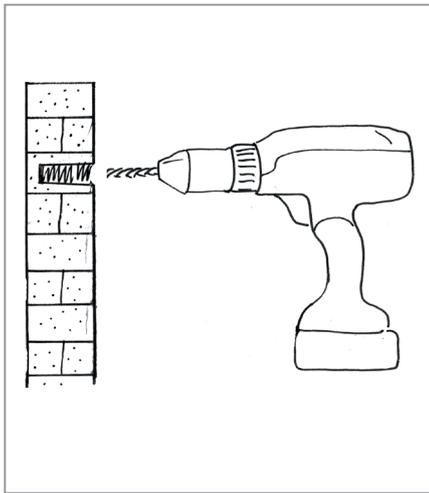


**A** - Drill a hole using a 7mm masonry drill

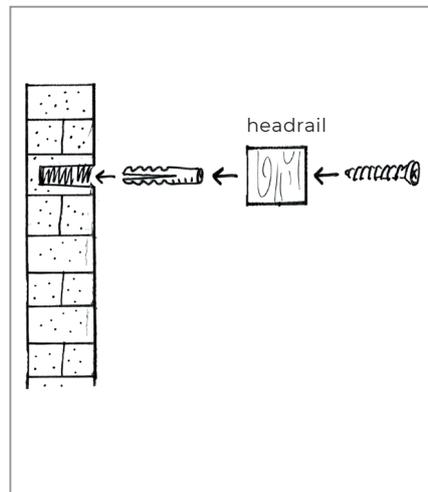


**B** - Then use the wall plugs and wood screws provided

To wood

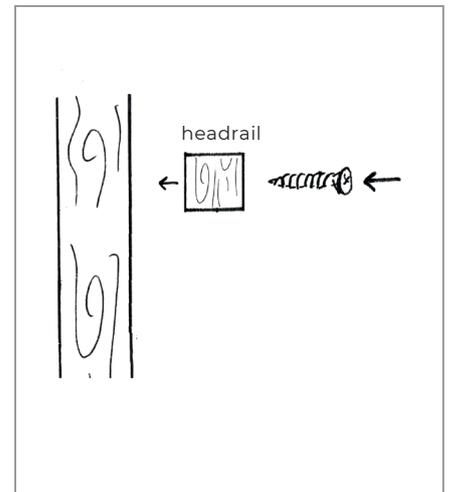


Simply use the wood screws provided.

### 2 Attach your blind to the headrail and secure the cleat

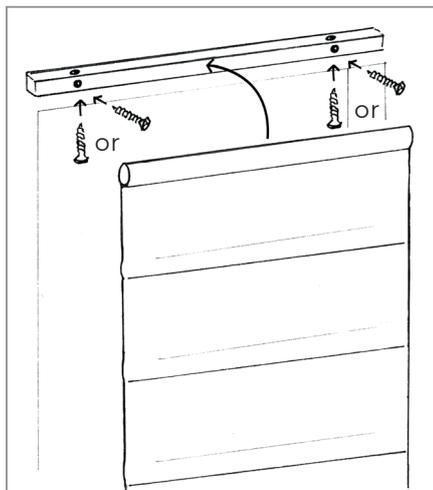

**A** - Attach blind using the velcro strips.

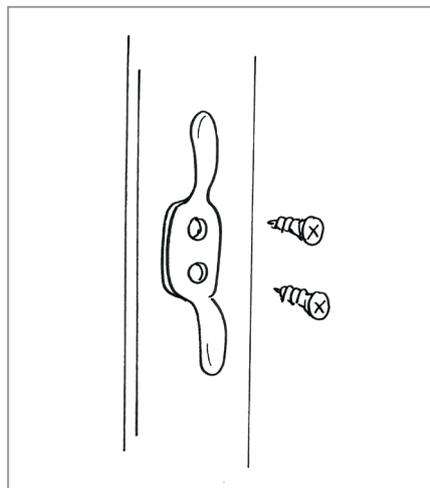

**B** - Fit the brass cleat to the window frame or the wall as high as possible and ensure the cord is fully wound round the cleat after each operation.

